


NORDGRÖNA

Flora

Installation Guide

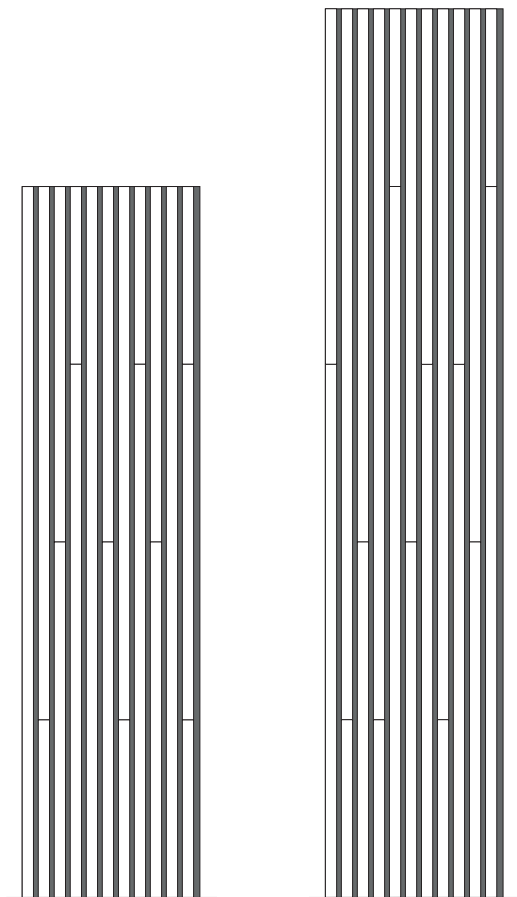

Flora
Product Info


www.nordgrona.com
info@nordgrona.com

Included




Screws


Required



Circular saw
(to shorten length)



Carpet knife
(to shorten width)



Screwdriver
(to fasten the screws)

1. Install

Flora is delivered in 2400 x 600 x 29 mm or 3000 x 600 x 29 mm sizes.

Install using the provided screws through the felt mat.

